

EJOT Duro PT[®] S 6.0 x L Bracket secret fix for High Pressure Laminates



EJOT PT[®] Stop drill bits
Dedicated drill bits to accurately drill stopped holes to the required depth and hole diameter in the high pressure laminate boards to receive the EJOT PTS fasteners to securely install hanging brackets

Application Guide.

8mm thick board

PT[®] S 60 x 9.5 (SAP 4510116330)

5.5mm deep hole PTS 4.9 x 5.5 stop drill


10mm thick board

PT[®] S 60 x 11.5 (SAP 4510117330)

7.5mm deep hole PTS 4.9 x 7.5 stop drill

13mm thick board

PT[®] S 60 x 14.5 (SAP 4510118330) 10.5mm
deep hole PTS 4.9 x 10.5 stop drill

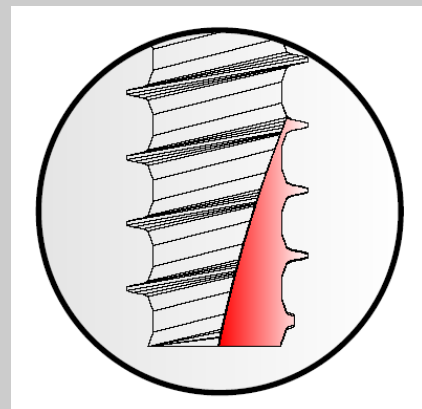

Torx 30 Drive

Not to be installed with a mechanical screw gun